

ELECTRIC FENCING GUIDELINES

ON ENTERING THE CLUB

1. DO NOT TOUCH FENCE!

If no other member/s are at the Club, the Red Warning light above the office door is illuminated (pulsing), and all break points are intact fence is 'live'!

If Red Warning light above the office door is not illuminated but all break points remain intact assume warning light may have failed and that fence remains 'live'!



2. Enter the Club

Office in the normal manner and **turn off the switch** above the secured wall socket.

NOT the one next to the secured plug.

Please note when live the small LED light indicated will pulse green.



3. Before use ensure the small hand-held electrical tester is correctly functioning by pressing the main central red button and observing the individual LED on right of the unit illuminates.



4. Using the tester (LED's uppermost and metal strip on underside resting on top fence wire) press and hold down the main central red button to ensure fence is now deactivated - No LED's illuminating



ELECTRIC FENCING GUIDELINES



5. It is now safe to unclip the entrance wires and relocate on the hooks provided on the adjacent wooden posts.

ON LEAVING THE CLUB

6. Ensure ALL entrance location wires are correctly re-located closing off the Green perimeter. **DO NOT ALLOW CABLES TO CROSS**, once located they must always be parallel to each other.



7. Switch back on

The upper section of the controller should now have a pulsing green light and the outside red warning light will also pulse indicating that the system is now 'live'!



8. Carefully using the small electrical tester again (LED's uppermost and metal strip on underside resting directly on top fence wire) press and hold down the main central red button to check fence is activated – crescent row of LED's illuminating.

9. Secure the site in the normal manner.

In the event of any issues please contact either – Mike Brooks on 07588049081 or George Eland on 07768721759